 


Position ID	Spare part no.	Replacement	Description
0401	00497211		Drive coupling
0402	00650499		Belt-drive
0403	00618931		Bearing
0404	00652500		Seal set - drum support
0405	00649045		Sealing
0407	00249014		Drum
0410	00643899	00652502	Taper

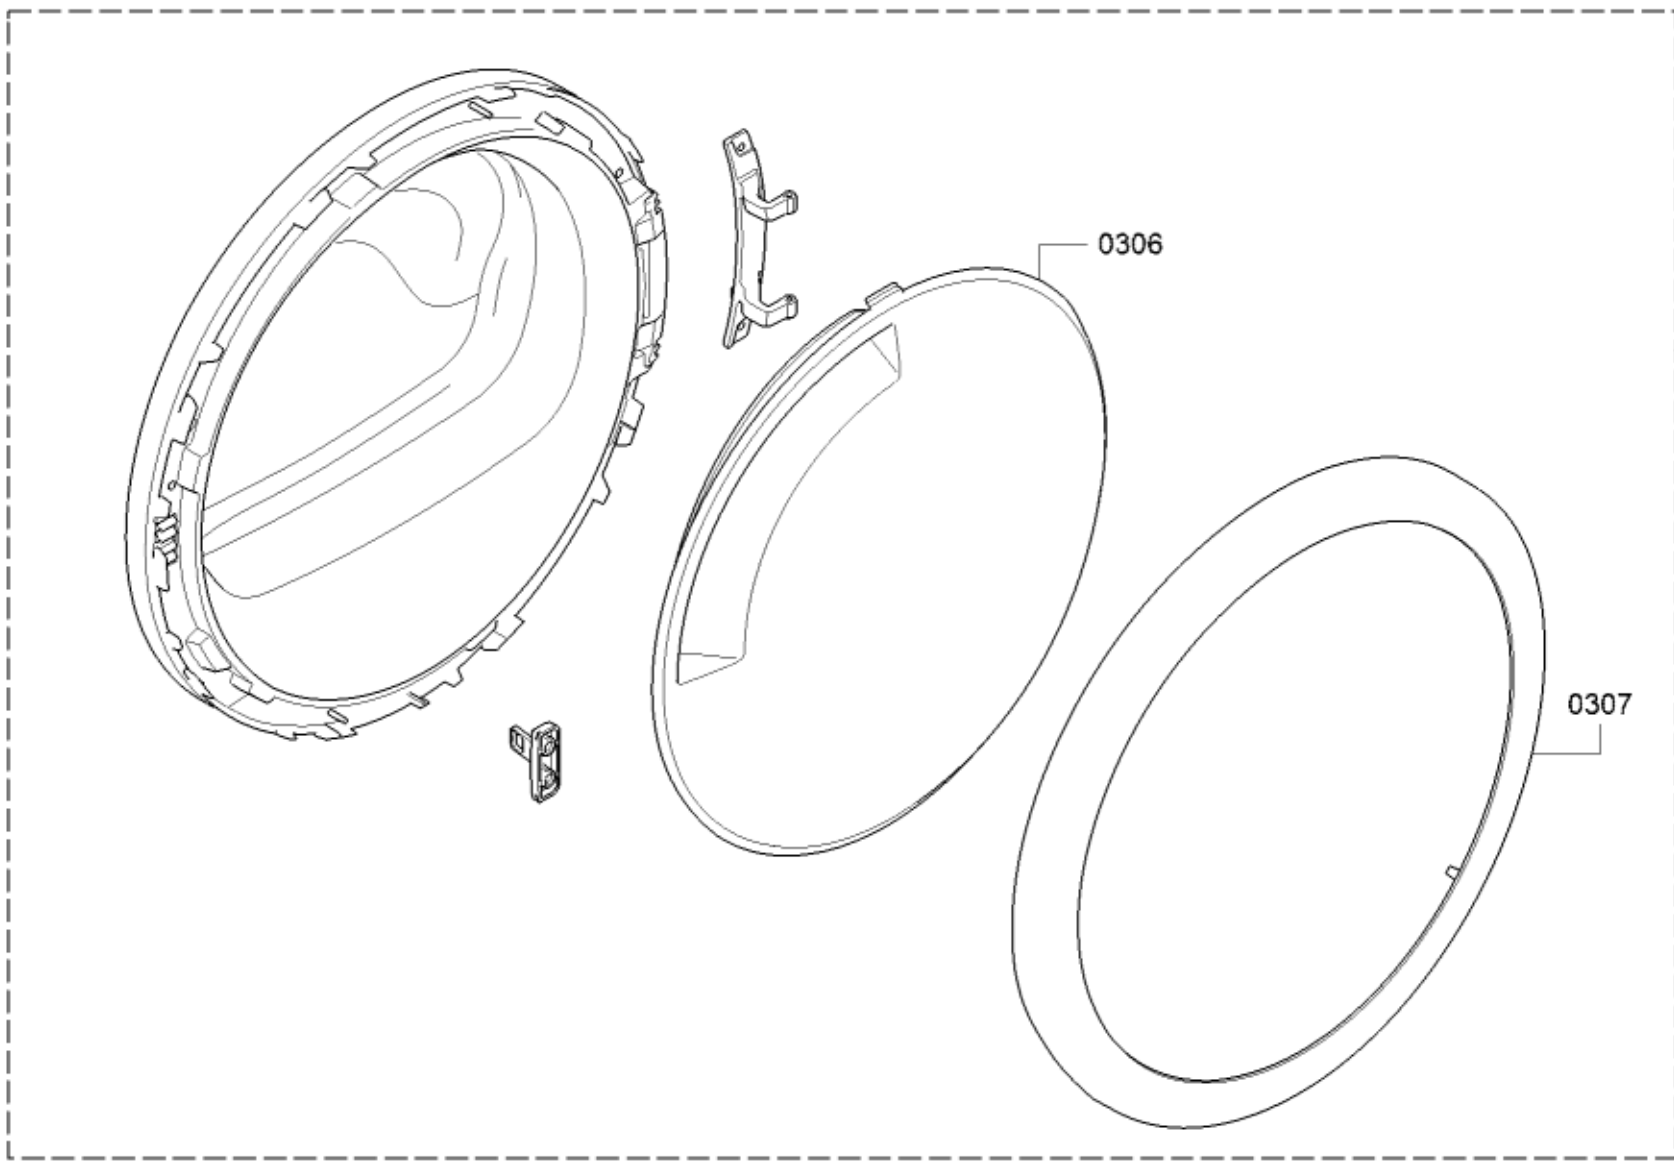


0306

0303

0307

Position ID	Spare part no.	Replacement	Description
0303	11037991		Window
0306	11004003		Glass cover
0307	11004045		Ring

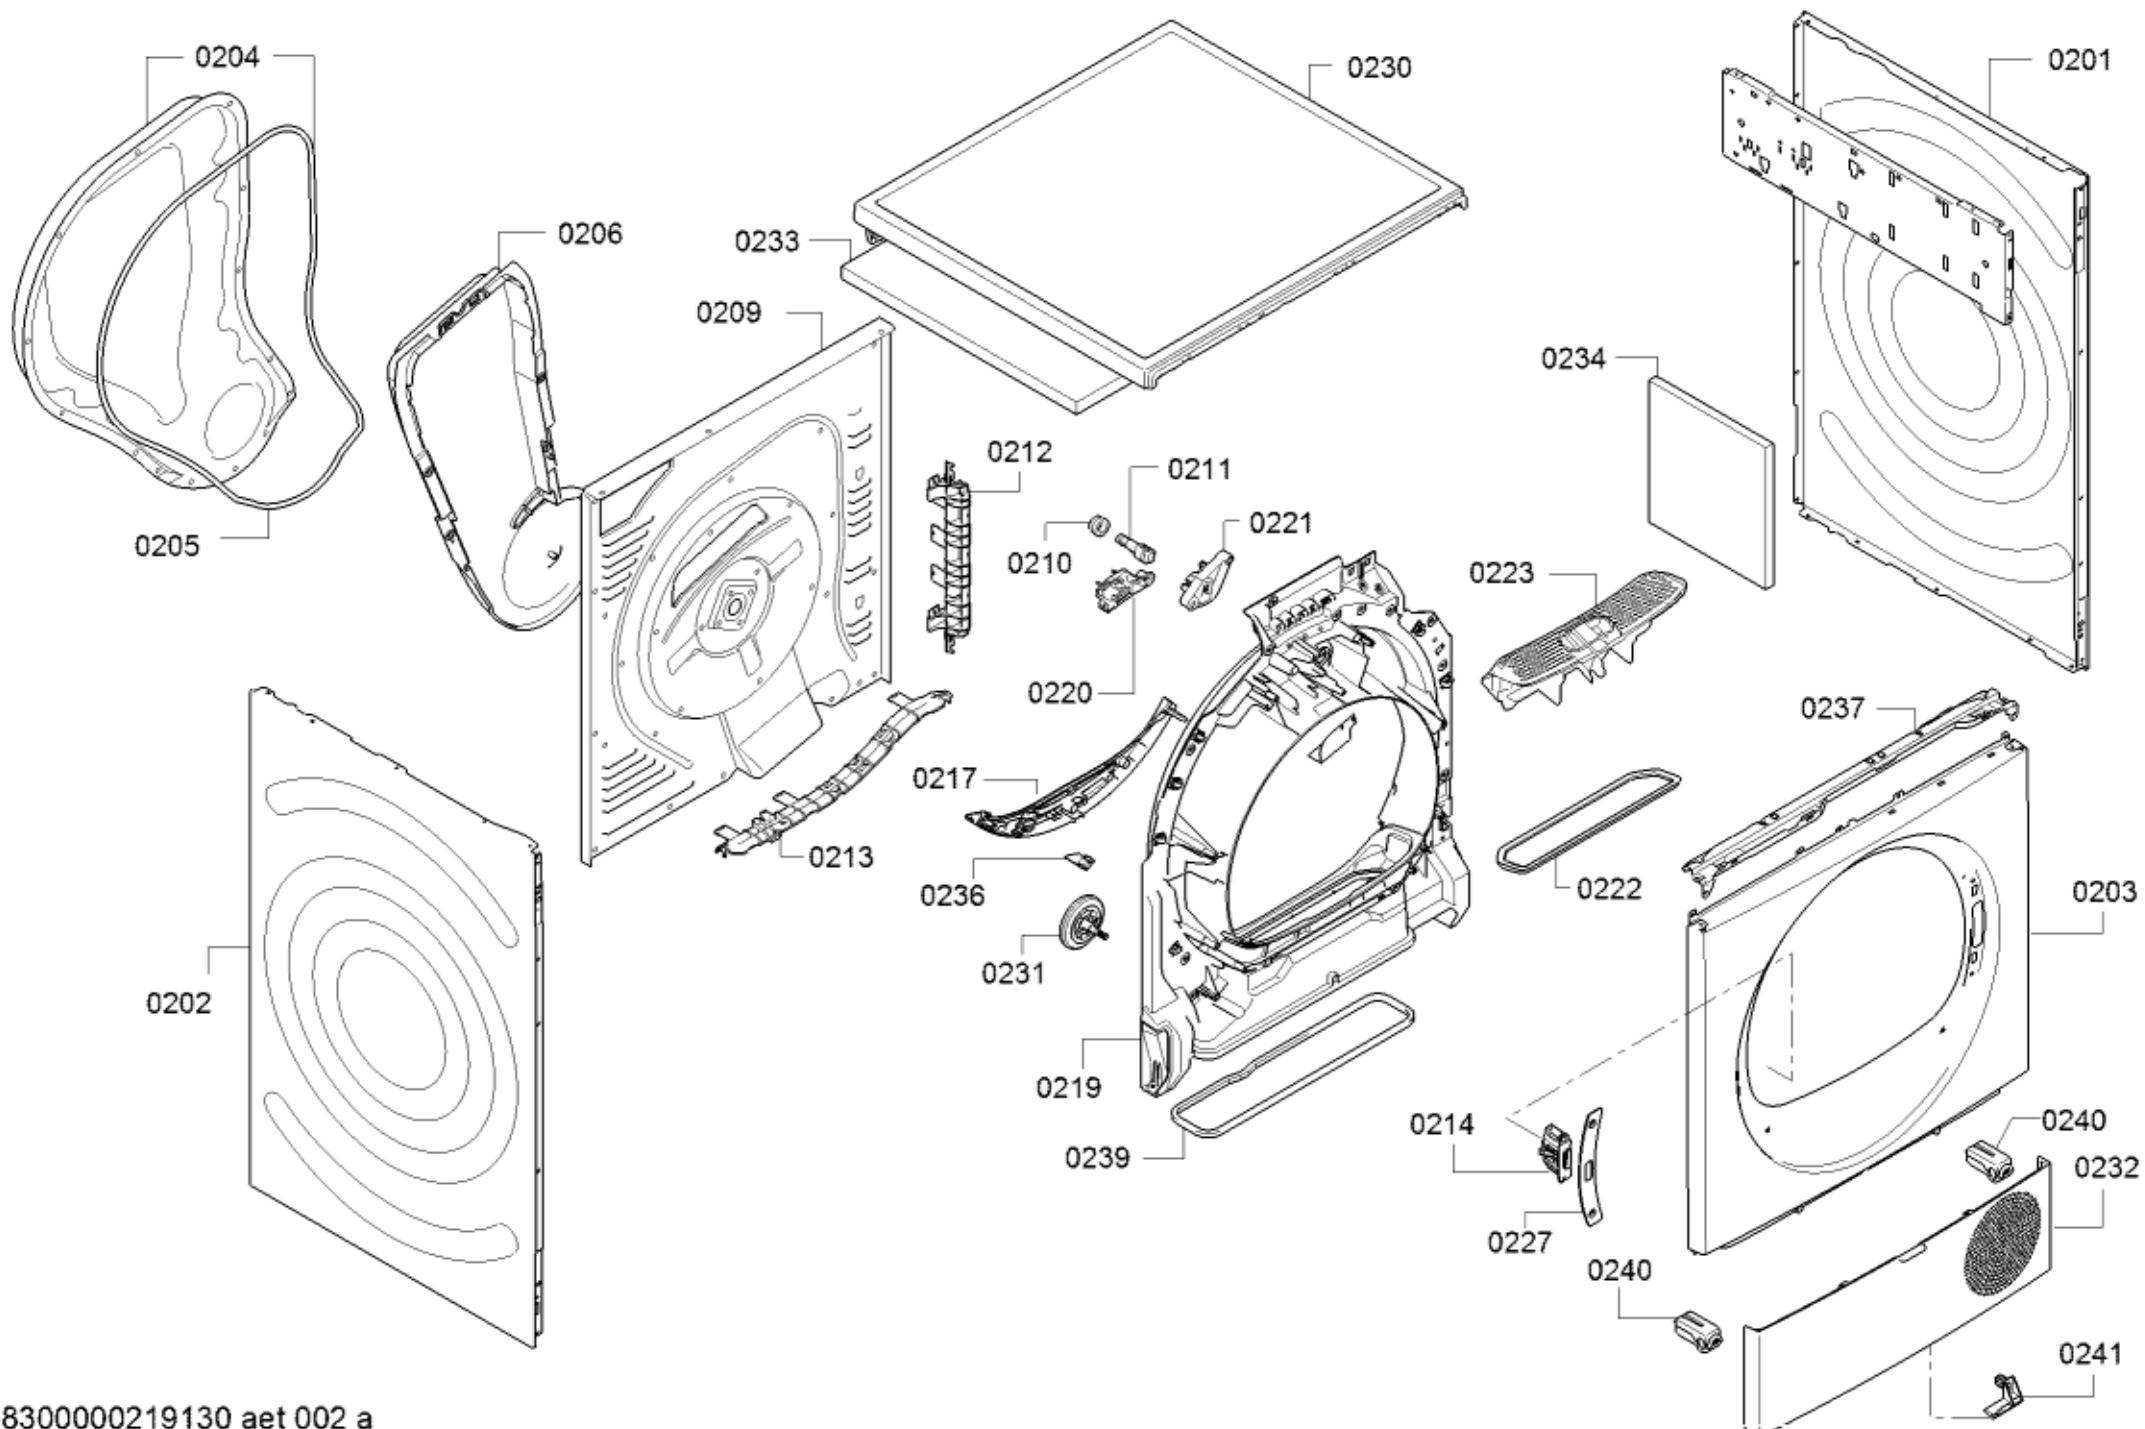 


















Position ID	Spare part no.	Replacement	Description
0201	00711862		Panel side
0202	00711862		Panel side
0203	00776255		Front panel
0204	00681458		Hood
0205	00600146	00621457	Sealing
0206	00770553		Ventilation duct
0209	23001766		Case-rear part
0210	00613752		Seal
0211	00617720		Lamp
0212	00707166		Duct
0213	00749613		Duct
0214	00623797		Latch
0217	11018215		Electrode
0219	00716844		Bearing shield
0220	10000270		Switch-door
0221	00623802		Cover
0222	00656034		Sealing
0223	12023848		Filter-fluff
0227	10001811		Cover
0229	00552830		Unavailable as spare part
0230	00771777		Worktop
0231	00600427	00613598	Wheel
0232	11028667		Cover
0233	00707054		Insulating part
0234	12006976		Insulating part
0236	00635382		Insulating part
0237	11010142		Front rail

0240


10004767

10016194

                 
Door hinge

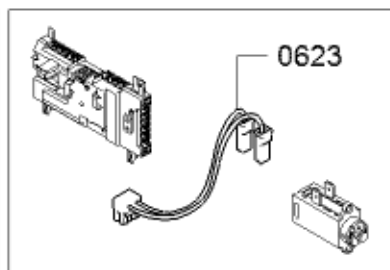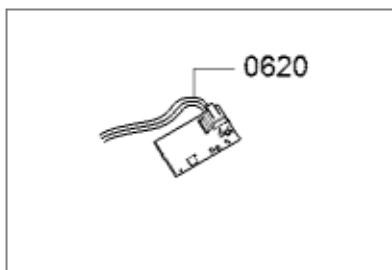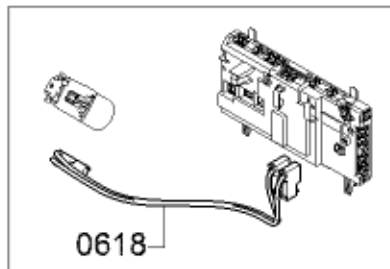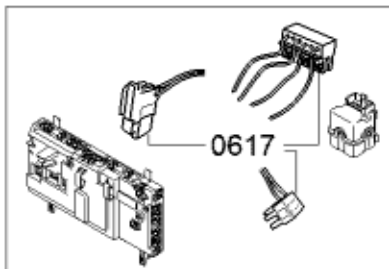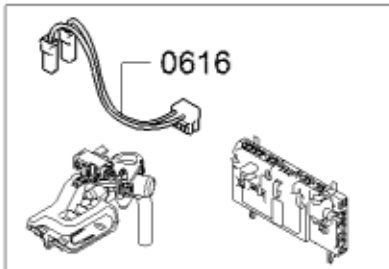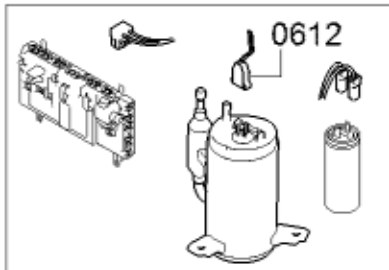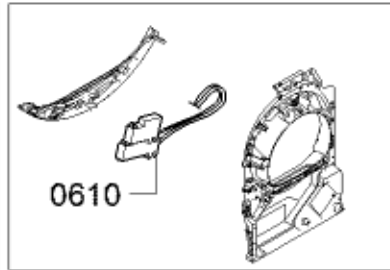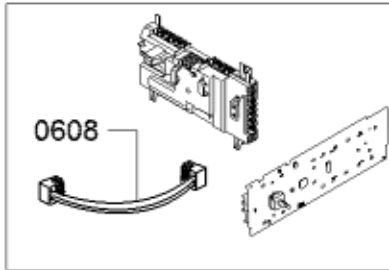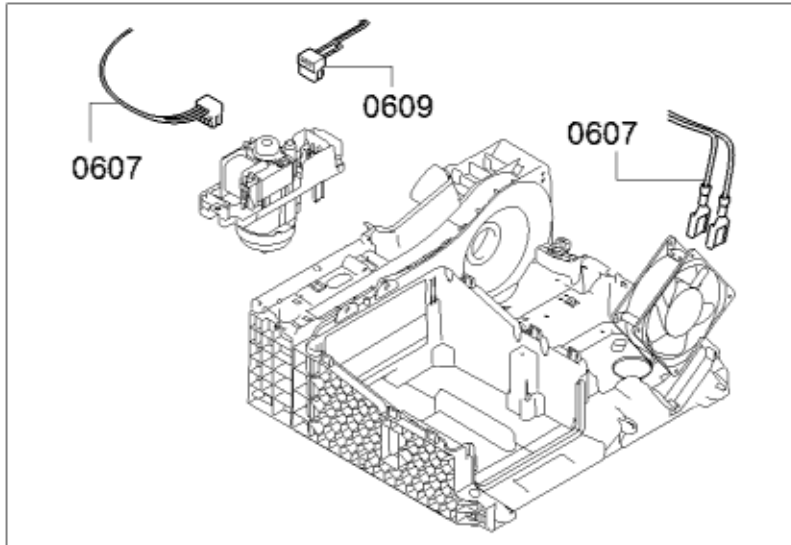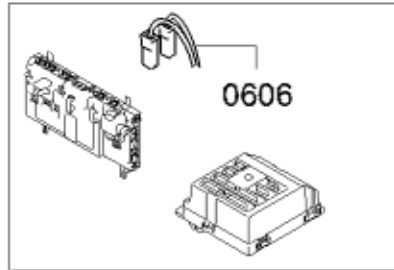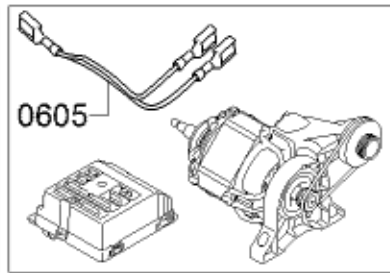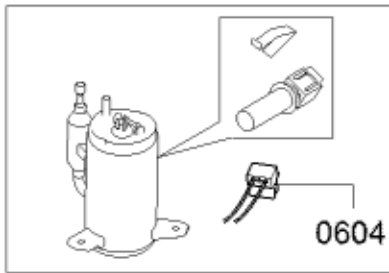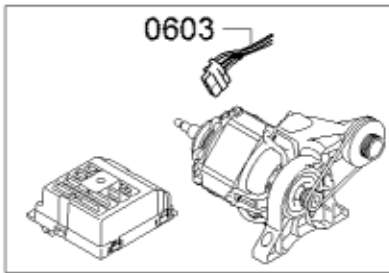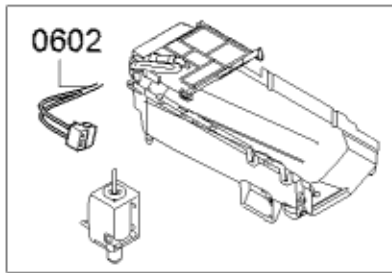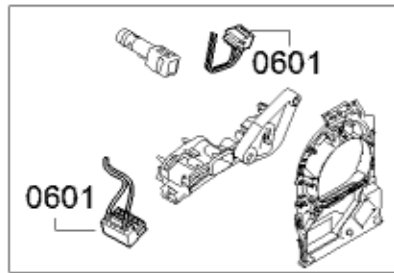

Position ID	Spare part no.	Replacement	Description
0601	10000513		Cable harness
0602	10000512		Cable harness
0603	10000488		Cable harness
0604	10000490		Cable harness
0605	10000491		Cable harness
0606	10000489		Cable harness
0607	10000493		Cable harness
0608	10000511		Cable harness
0609	10000509		Cable harness
0610	10000514		Cable harness
0612	10000487		Cable harness
0616	10012831		Cable harness
0617	10002856		Cable harness
0618	00635475		Cable harness
0620	00636508		Cable harness

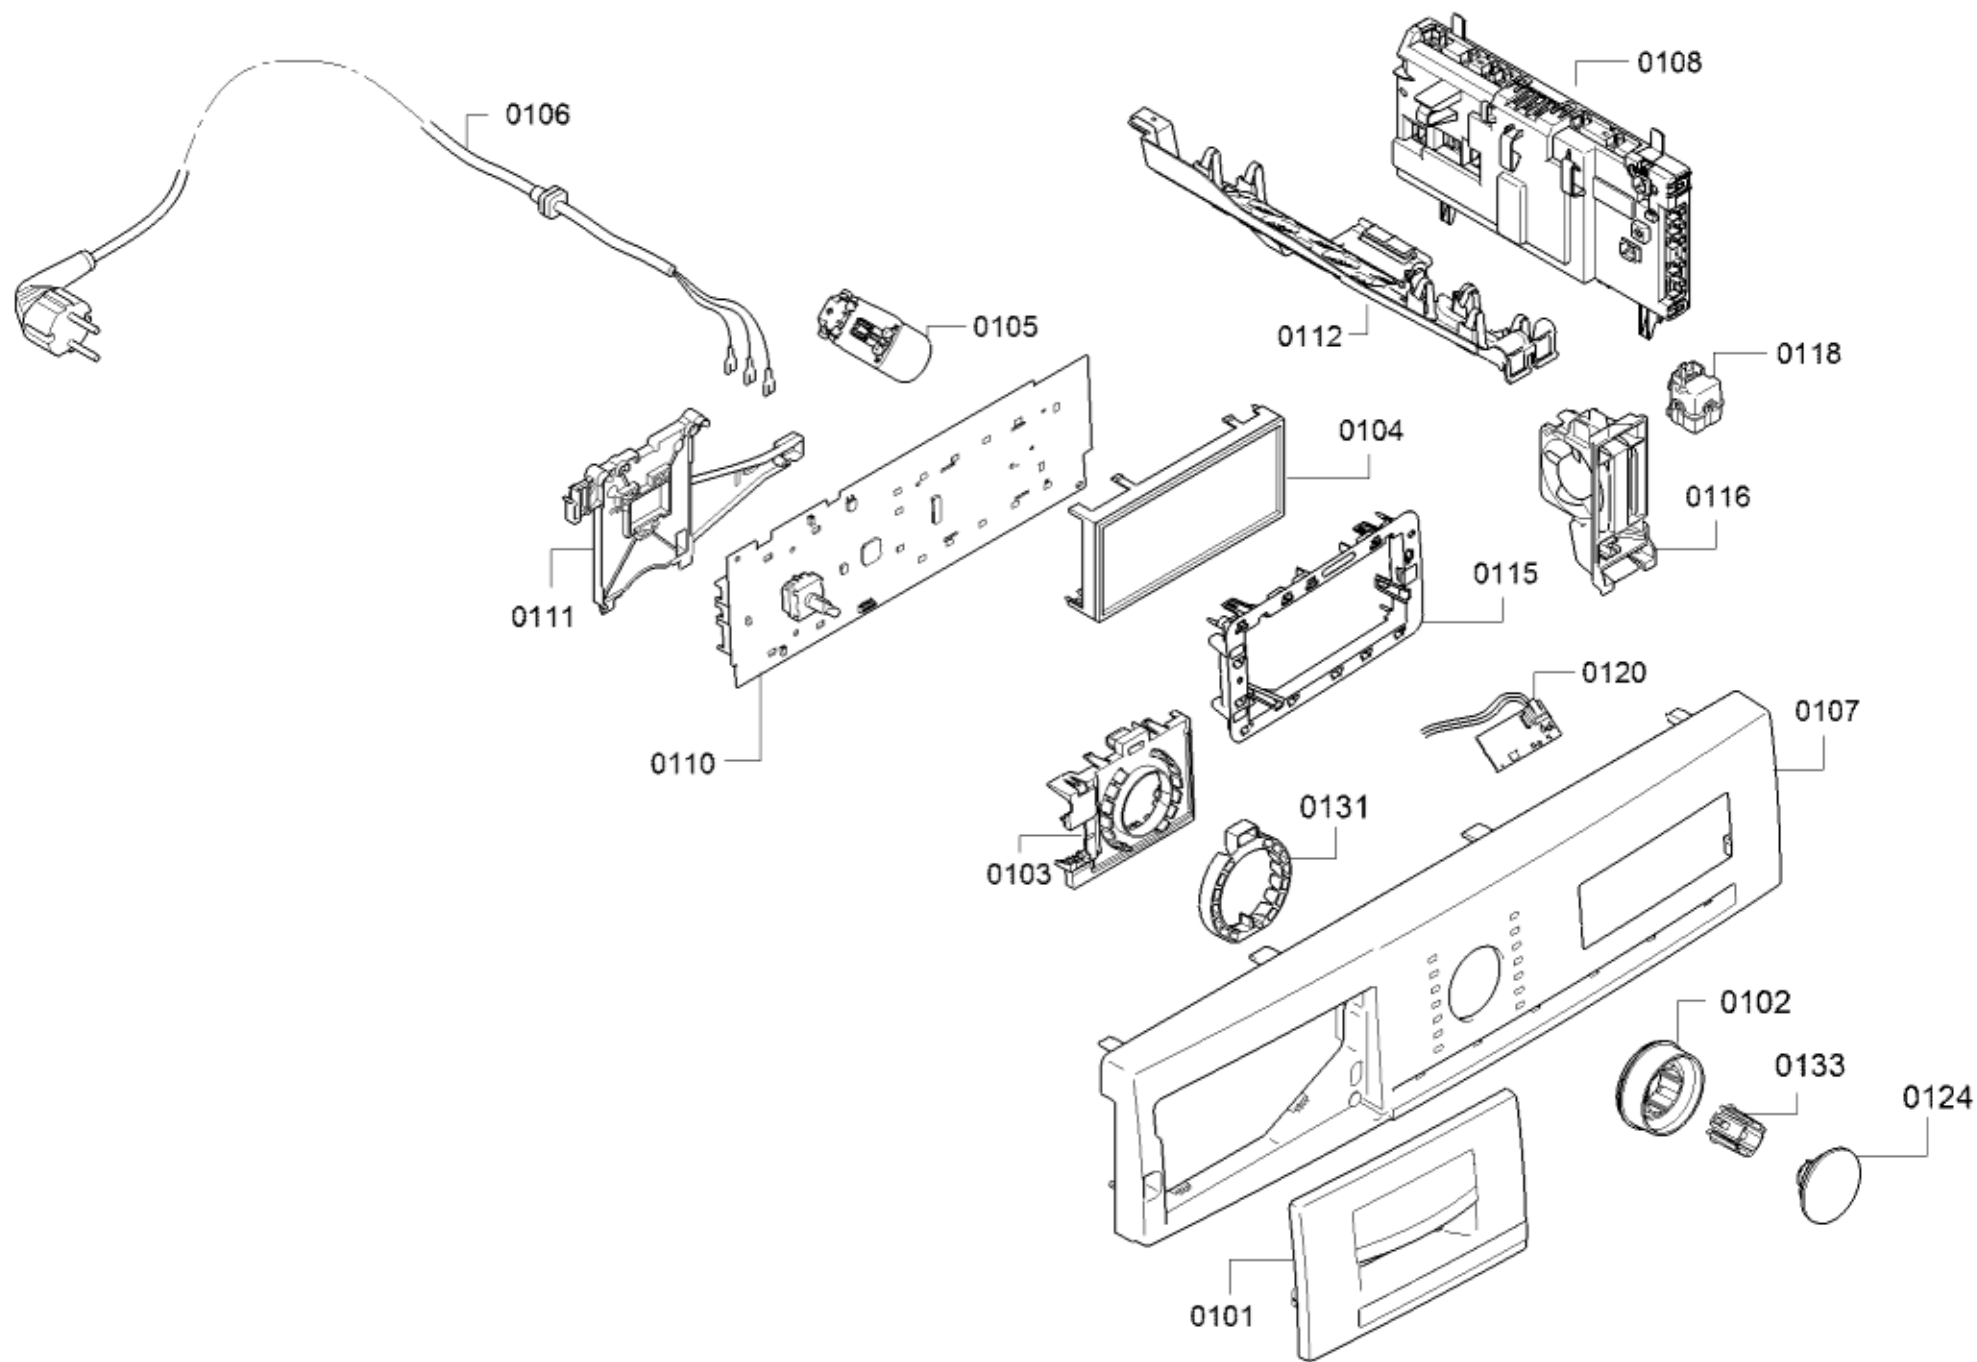 

Position ID	Spare part no.	Replacement	Description
0101	12030844		Tray handle-dispenser
0102	00636740		Knob-programme
0103	12027244		LED-plate
0104	12030747		Display
0105	00639005		Capacitor-interference suppre.
0106	00644995		Power cord
0107	10014429		Panel-facia
0108	10019646		Power module programmed
0108	12029865		Power module not programmed
0110	10019645		Operating module programmed
0110	11033520		Operating module not programmed
0111	10010613		Frame
0112	11027356		Duct
0115	12004807		Holder
0116	12019807		Fan
0118	00635395		Capacitor-interference suppre.
0120	12029635	10016783	Connectivity module
0124	00636413		Knob-programme
0131	00636403		Frame
0133	10004889		Guide
0199	17000183		Corner nozzle

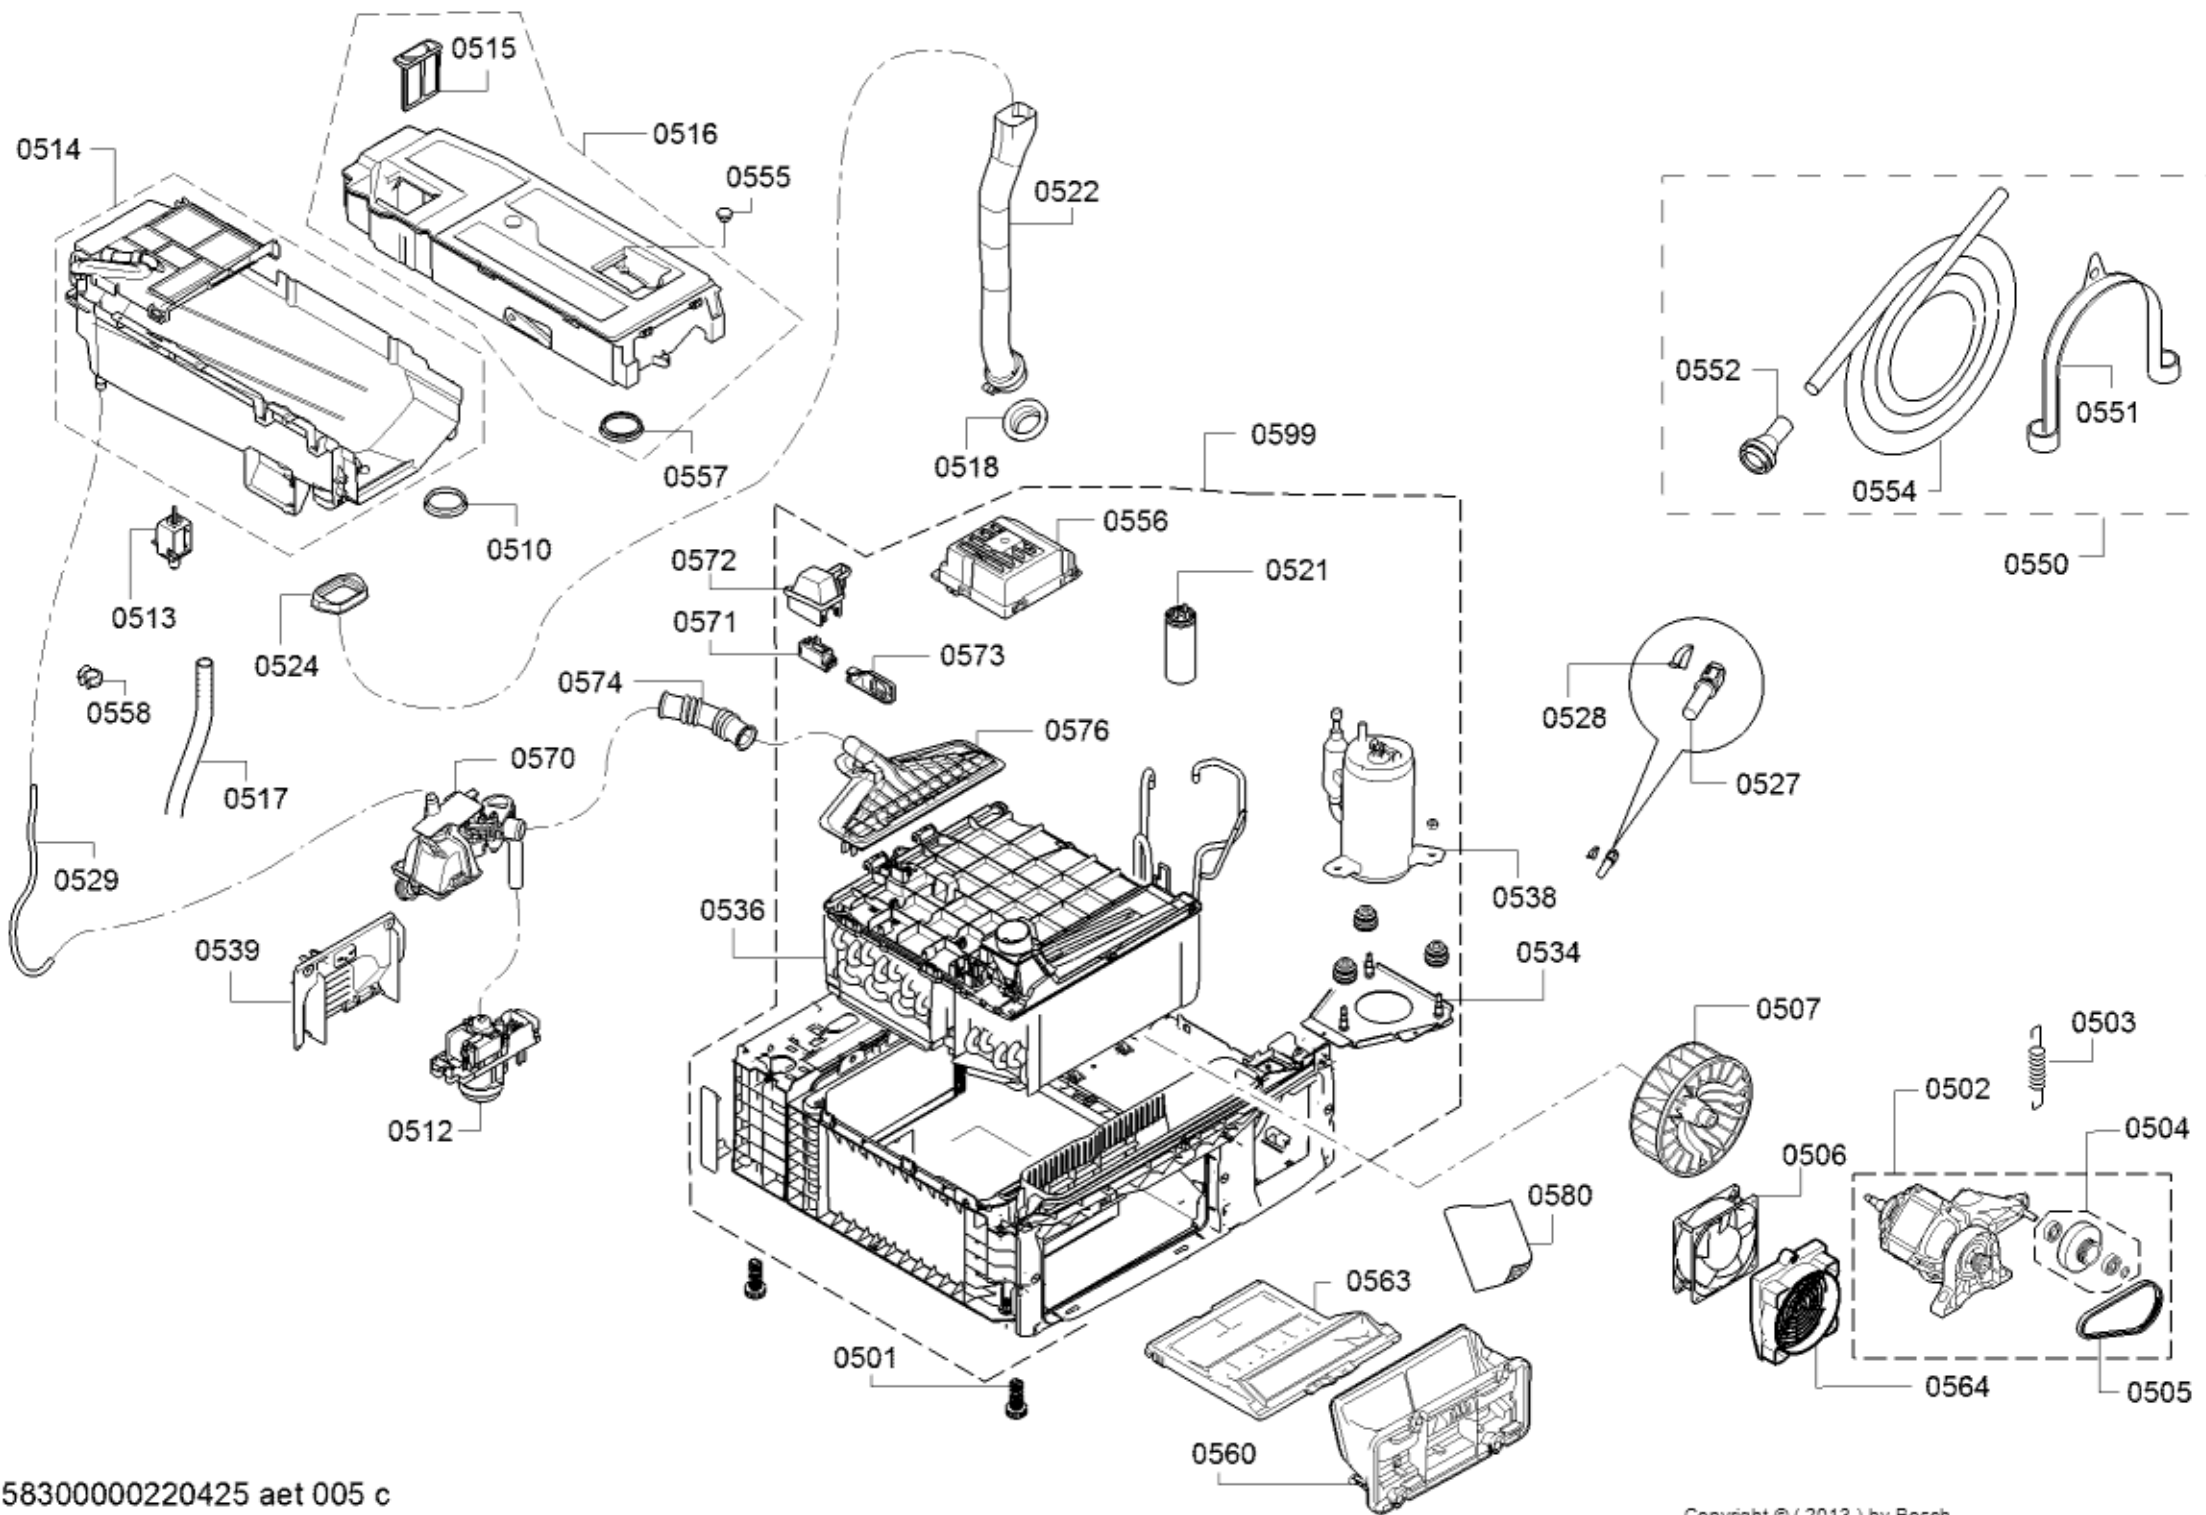 

Position ID	Spare part no.	Replacement	Description
0501	00611942		Foot
0502	00146170		Motor
0503	00615653		Spring
0504	00600436		Roller-tension
0506	00651456		Fan
0507	00752112		Fan drum
0510	00613959		Sealing
0512	00146123		Pump
0513	00631076	10023050	Electro magnet
0514	11014484		Housing
0515	00619697		Filter
0516	00707089		Container-condensed water
0517	12013804		Hose-recirculation
0518	10000519		Sealing
0521	10016807		Capacitor-metal paper
0522	11014483		Tube
0523	00629623		Hose clamp
0524	00632210		Sealing
0525	10012662		Hose-fill
0527	00170961		Sensor-NTC
0528	00613776		Spring
0529	00657918		Hose-recirculation
0534	12022758		Support
0539	00656128		Cover
0550	12029956		Outlet hose
0551	00655300		Holder
0552	00625434		Connection

0554	00657956	12013827	Hose-fill
0555	00629040		Locking cap
0556	12029948		Inverter
0557	00613787		Sealing
0560	12023844		Handle
0563	12023842		Insert
0564	10000520		Cover
0570	12030676		Outlet set
0571	10012535		Flow control regulator
0572	12029949		Cover
0573	00552830		Unavailable as spare part
0580	12038880		Cleaning cloth