


# KUDOS SHOWER PRODUCTS TILING UPSTAND STRIP

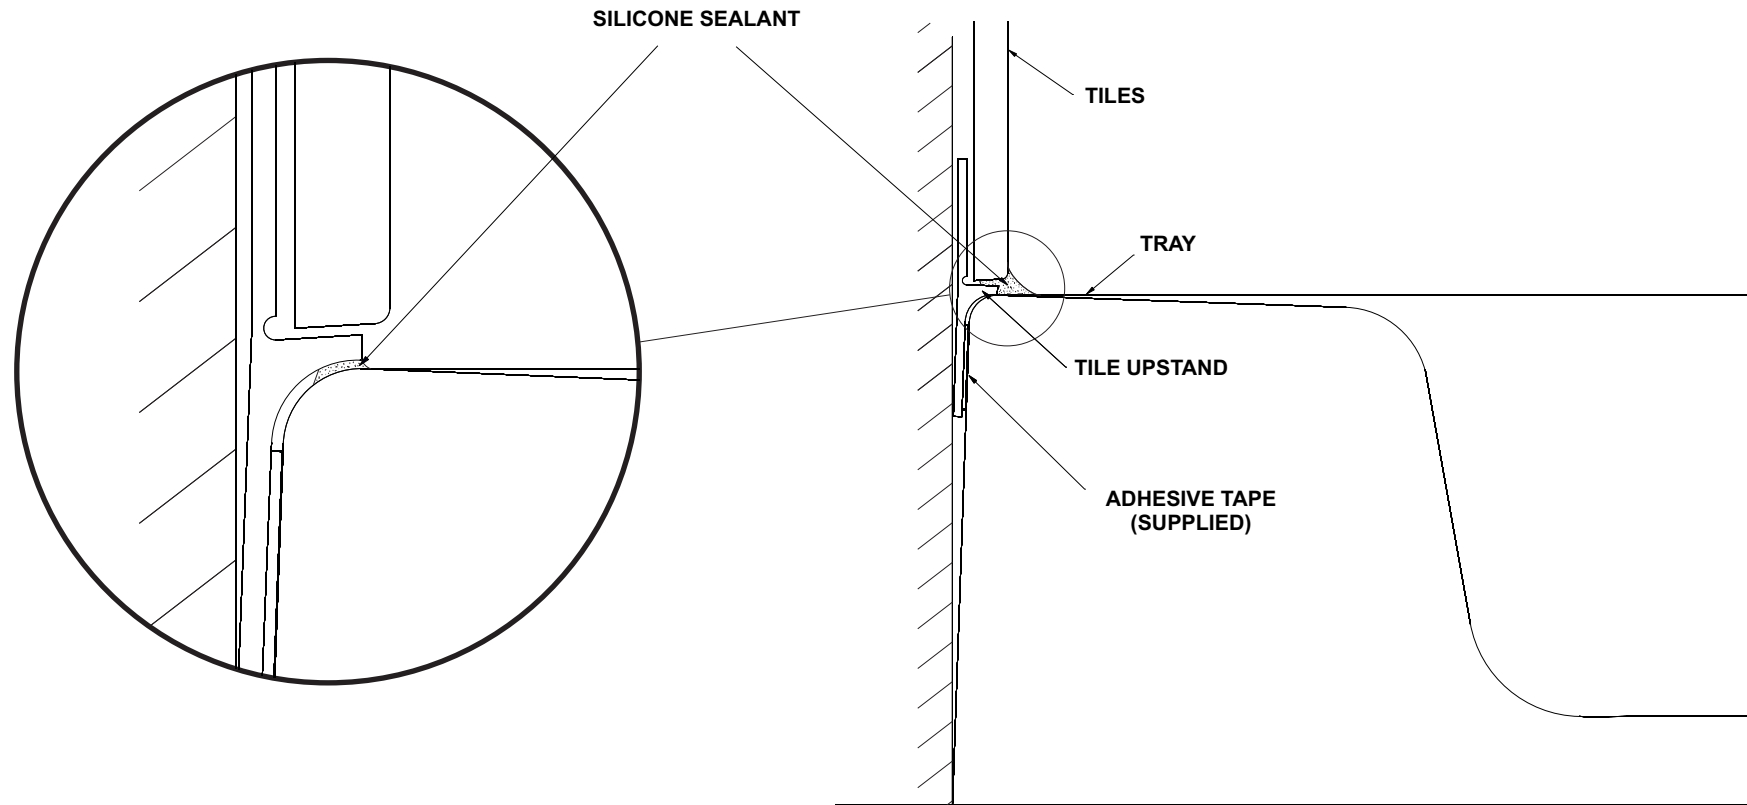

- The upstand must be applied in ONE PIECE on all installations.
- Remove the protective film from the showertray where the upstand is to be placed.
- Ensure the tray edge is clear of any dust or grease before applying the upstand.
- Apply the tiling upstand to the tray in the position shown.
- Ensure the tape is fully pressed into place against the tray.
- Apply silicone sealant under the lip of the upstand strip, wiping away excess (see exploded view).
- Also silicone seal as shown, along the complete joint between the tiles and shower tray.